




Front Elevation

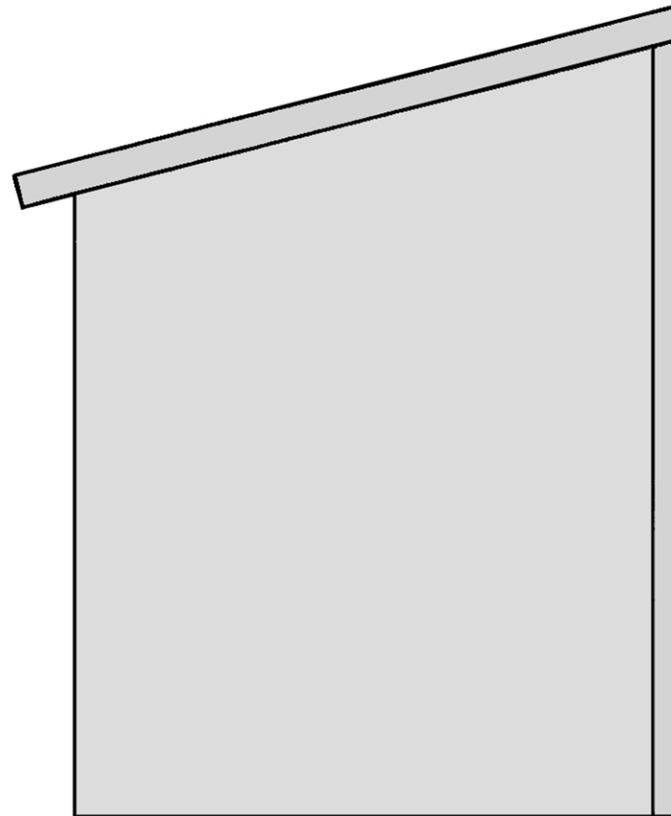

Side Elevation

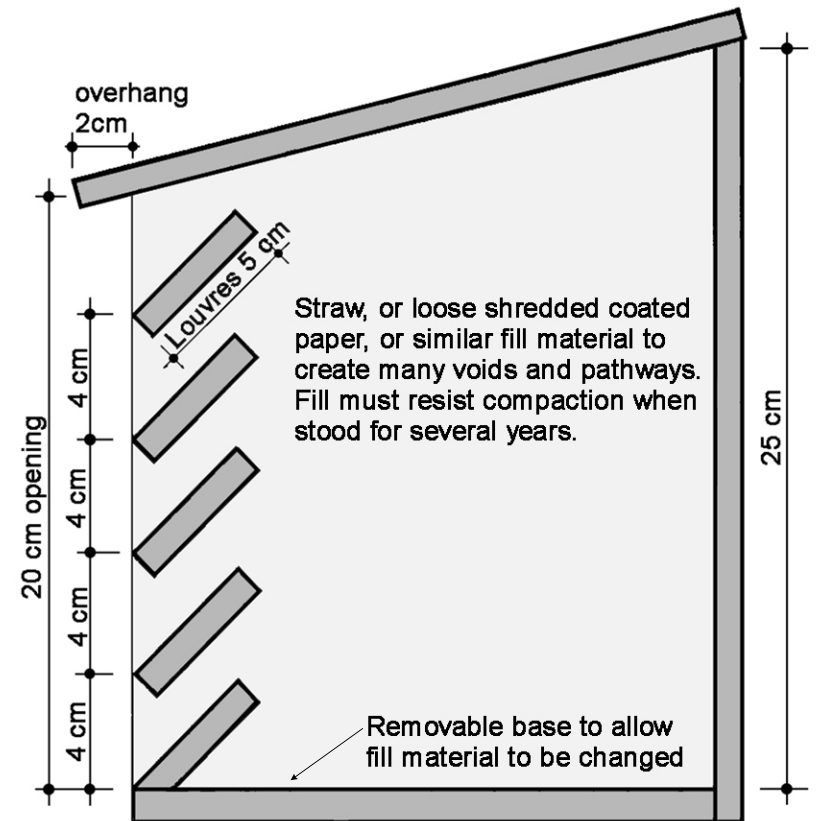

Vertical Section

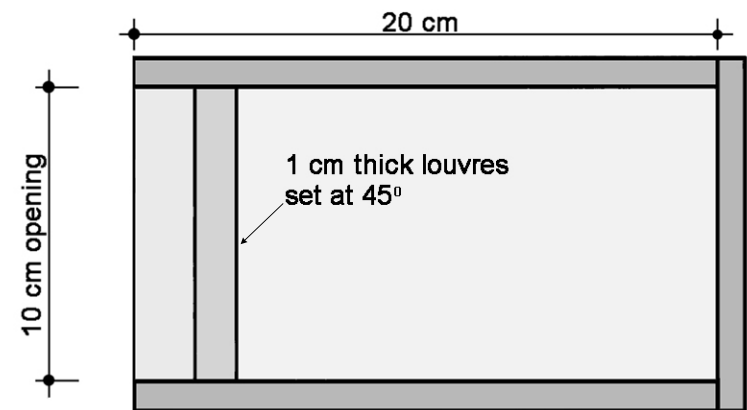

Sectional Plan

Notes:

- 1) Overall dimensions of box determined by thickness of material used. 1 cm thickness should be the minimum. Softwood or external quality sheet material is suitable.
- 2) Box assembly by coated screws or galvernised nails. Base should be screwed to allow periodic removal to change the fill material. Do not paint box. A water-based preservative will prolong box life. Do not use spirit based preservatives.
- 3) Box can be stood anywhere. It can be hung using mirror plates or brackets.
- 4) Box size can be enlarged by making it wider. The front-to-back dimension should be maintained.
- 5) Fill material should create lots of accessible pockets to allow use by many different bugs.

